

# ASTON MARTIN DESIGN-KIT „MISSION X“

## DB11 COUPÉ / VOLANTE

## DBS COUPÉ / VOLANTE

## DBX

## VANTAGE COUPÉ / ROADSTER

### INSTALLING INSTRUCTIONS

#### Content:

1.	Wrapping procedure .....	1
2.	DB11 Coupé / Volante.....	2
3.	DBS Coupé / Volante .....	3
4.	DBX .....	4
5.	Vantage Coupé / Roadster.....	5


## 1. WRAPPING PROCEDURE

1.1 Wrap "Mission X" logotype

1.2 Wrap stripes

1.2.1 If necessary (depending on the bodywork), cut the application tape between the film stripes




1.2.2 Cut the logotype overlapping stripes with a distance of approx. 5 mm and remove red coloured areas

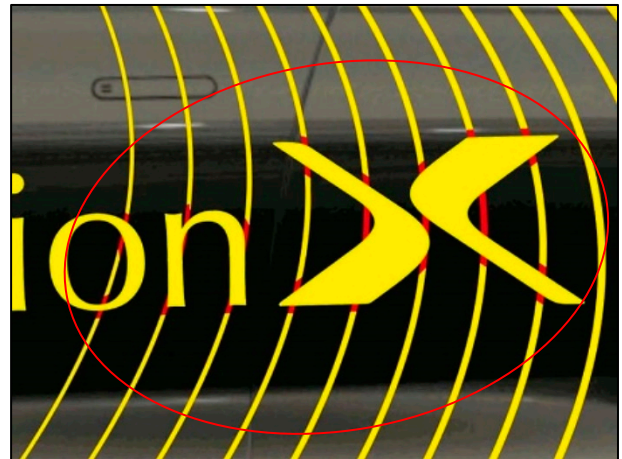





#### Note:

**All measurements in cm, always measured up to the bodywork edge!**

## 2. DB11 COUPÉ / VOLANTE

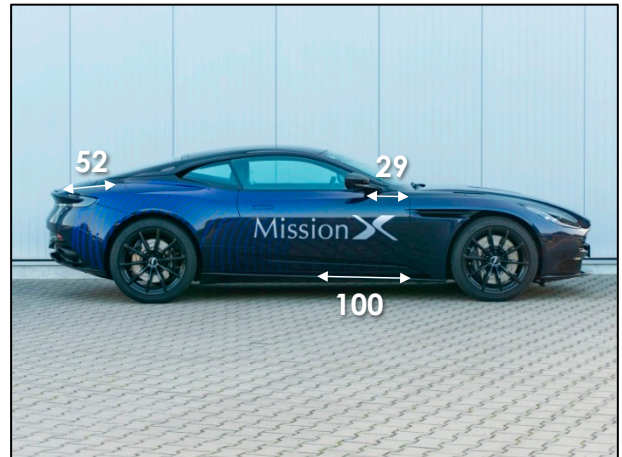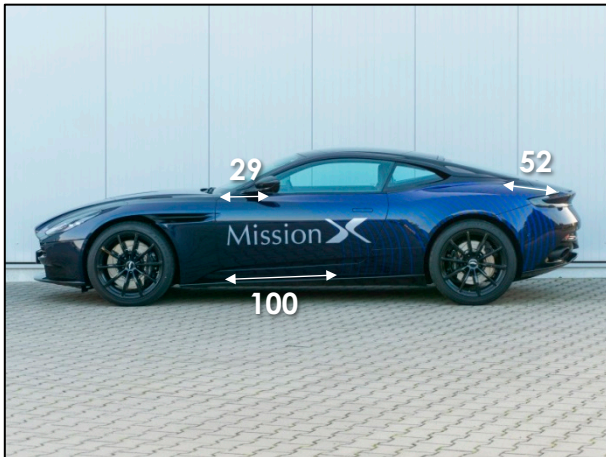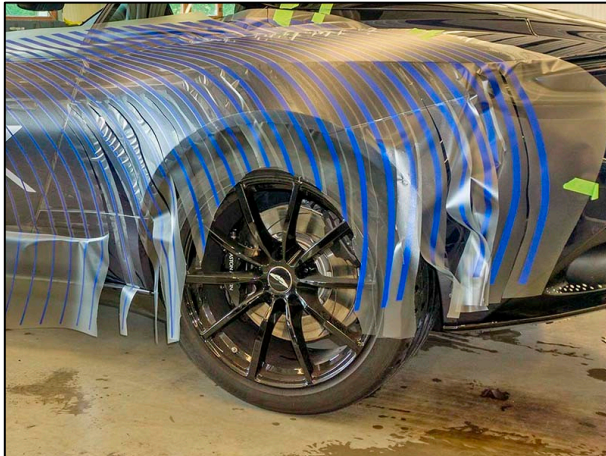


### 3. DBS COUPÉ / VOLANTE

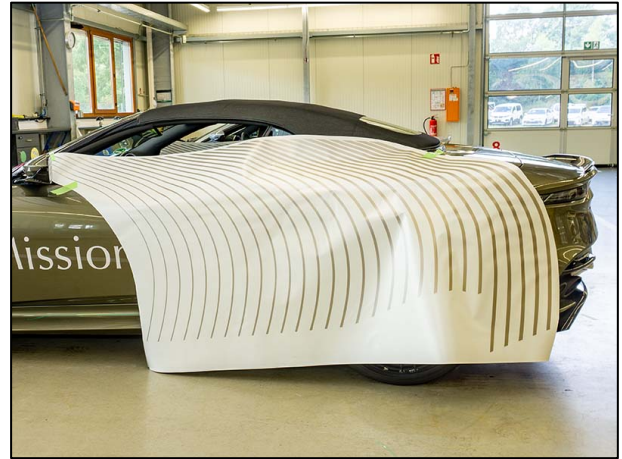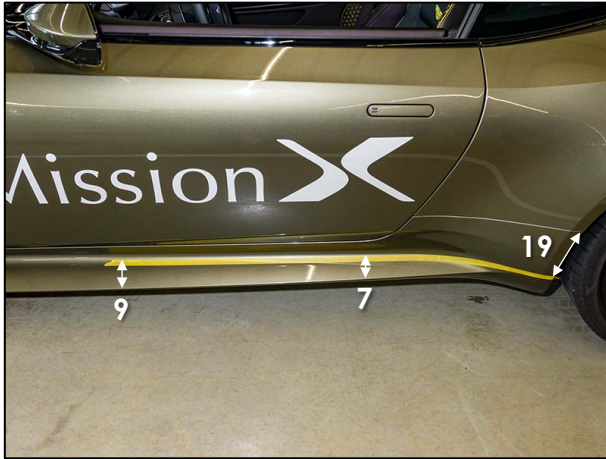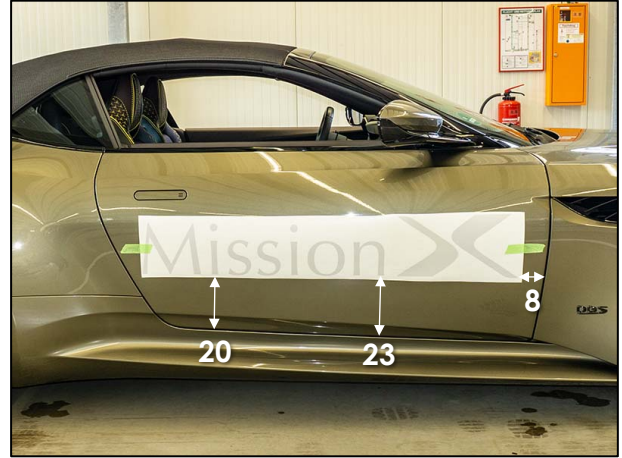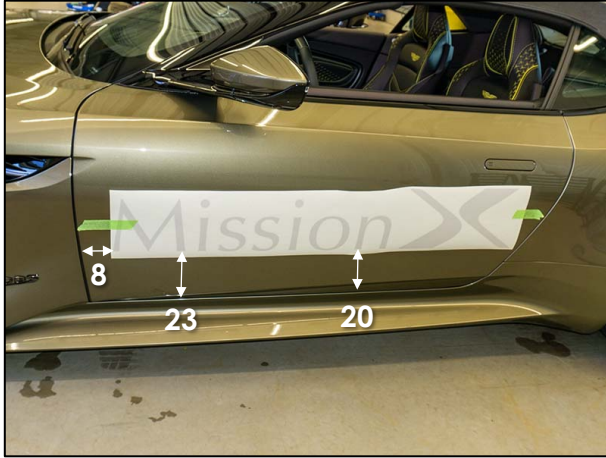


Cut the film stripes on both sides in the bumper area by pulling masking tape or knifeless tape before aligning as shown.








#### 4. DBX

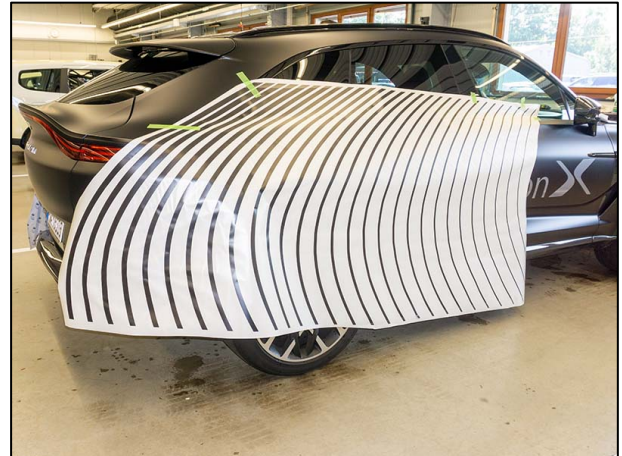

## 5. VANTAGE COUPÉ / ROADSTER

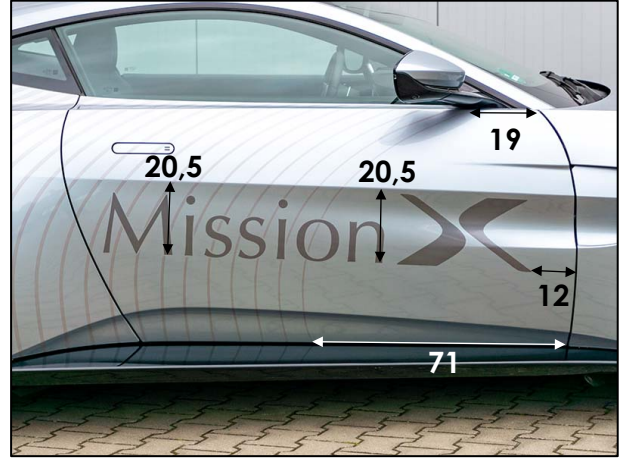

AMR-Edition:

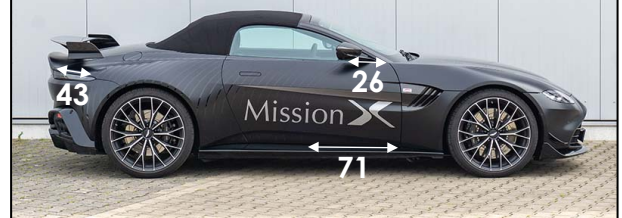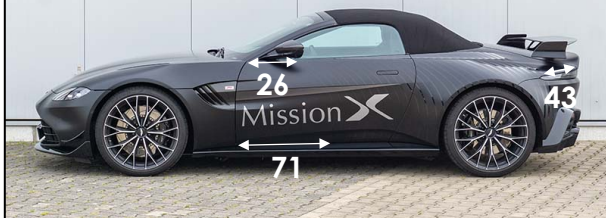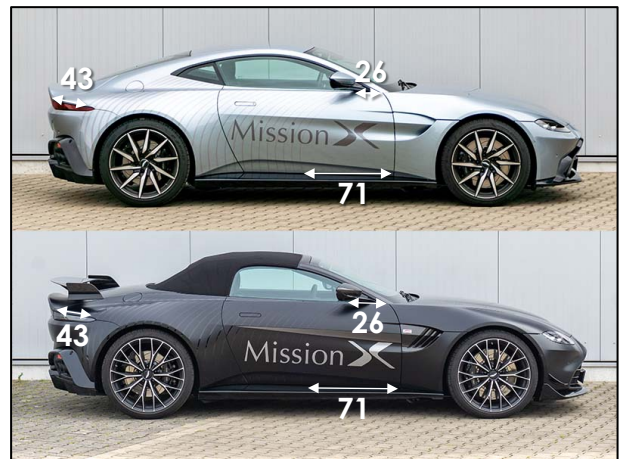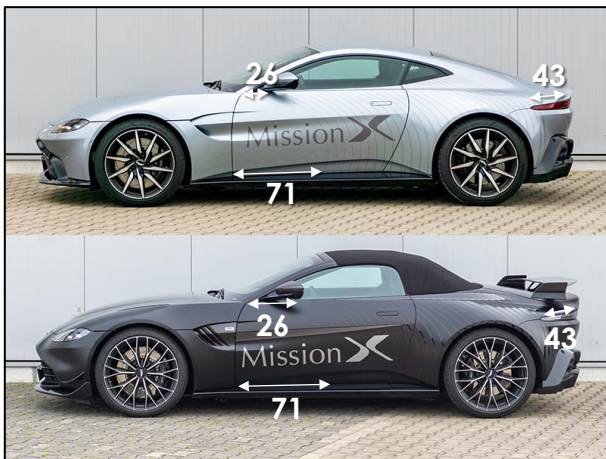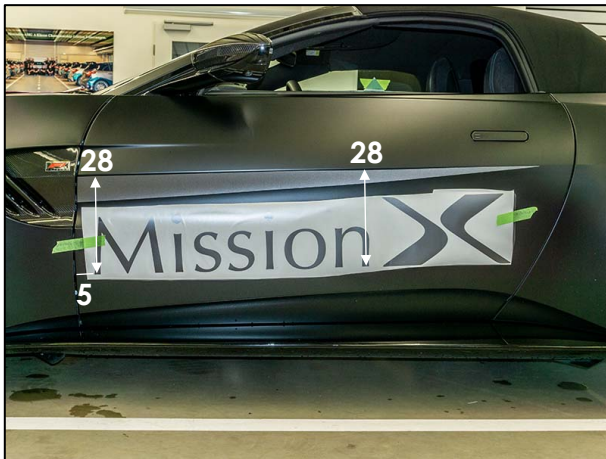

© INTAX Effective 16 Aug. 2021